

OPTION PARTS

#310320 Side Damper Set

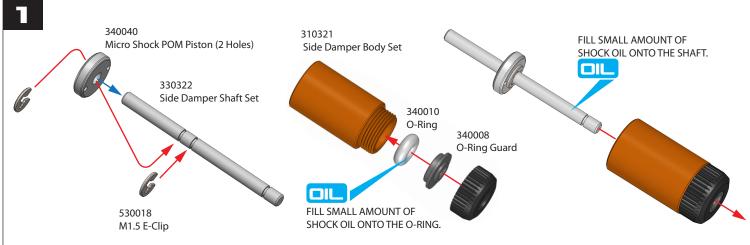

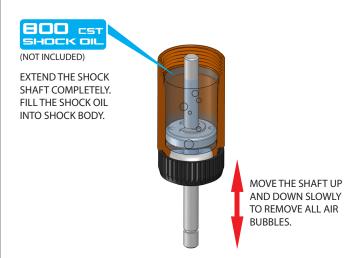



FILL SHOCK OIL UP TO THE THREAD.

PUT THE SHOCK GUARD INTO SHOCK BODY SLOWLY, EXCESS OIL WILL LEAK OUT FROM THE FILLED SHOCK BODY.





